


# NEXUS II JIG SETTINGS


The jig is supplied set to the neutral horizontal adjustment. This corresponds to the sledge adjustment position as shown over leaf.

To alter the standard setting, move slide to left or right as required.

The sledge adjustment screw will have to be pre-set accordingly.

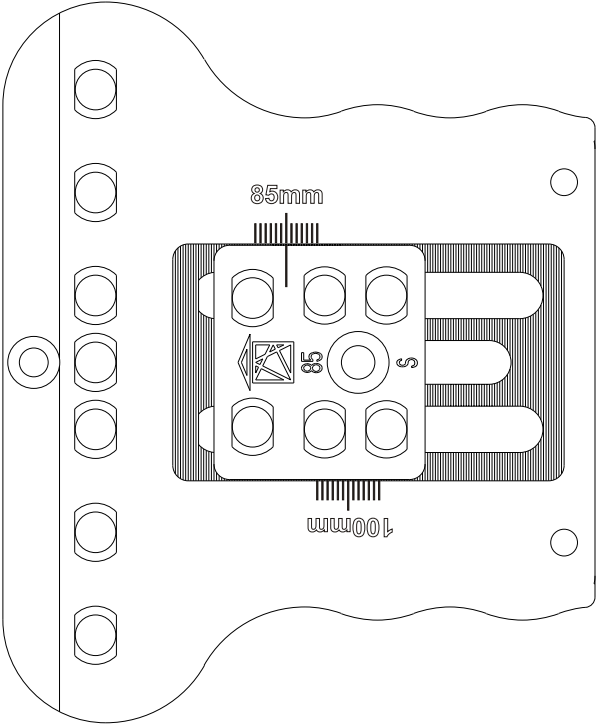

85mm Nexus hinge setting

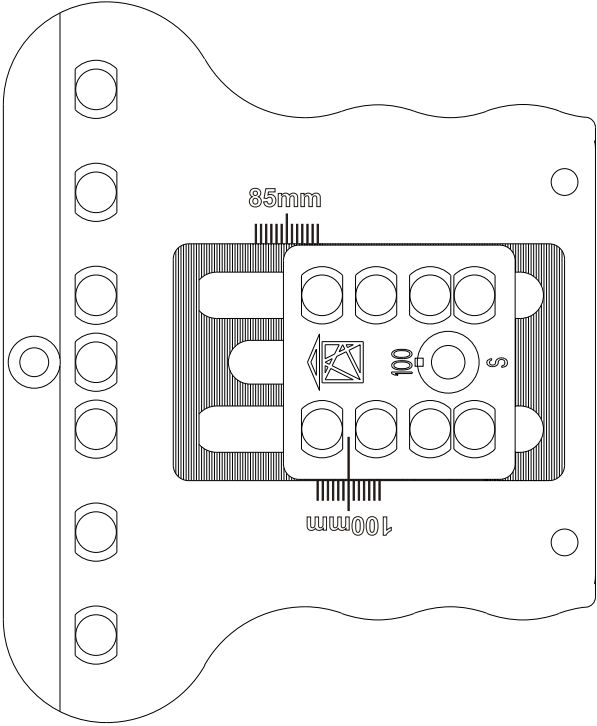

100mm Nexus hinge setting